Dual-Axis Servo-Inclinometer, TSD series



This is two-axes inclinometer built of two TS inclinometers packaged in a single housing. As such, it features the same high performance resulting from closed - loop operation: high linearity, and virtually infinite resolution, low temperature sensitivity, repeatability, etc.

SPECIFICATIONS:

 $\pm 5^{\circ}$ to $\pm 90^{\circ}$ Measuring range Supply voltage ±15V @ 10mA Full Scale output ±5V ±0.25% Non-linearity error 0.01%FR typ Bias 0.1% FR typ Single axis misalignment 0.5° typ Misalignment between axes 0.5° typ

2 arc-sec /°C typ Temp. coefficient of Zero Temp. coefficient of Scale 0.01%/°C typ

Temp. range, operating $-30 \text{ to } + 70^{\circ}\text{C} \text{ (-40 to } +85^{\circ}\text{C)}$ (storage)


Constant acceleration

250q, 11ms Shock

Housing material Anodized # 2024 Aluminum alloy



OPERATION PRINCIPLE

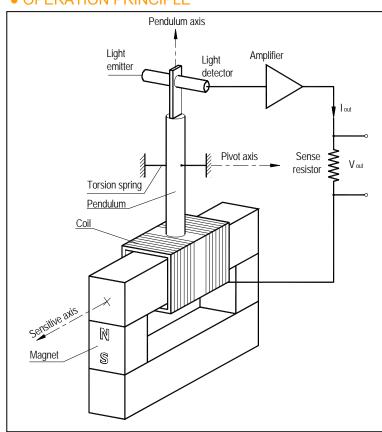

A pendulum is suspended from a low stiffness torsion spring. Pendulum rotation can be induced by a linear acceleration along its sensitive axis (acceleration mode), or by a component of the gravity force along that axis caused by tilt (tilt mode). The pendulum displacement is sensed by a photo – electric position sensor, the output of which is amplified and fed to the coil of an electromagnetic torquer attached to the pendulum. The polarity of the connection is chosen to produce a reaction torque which tends to return the pendulum to its zero position (negative feed back). Since the input and reaction torque's exactly balance each other, the current producing the reaction torque is a very accurate and linear function of the acceleration and is used as output. In the tilt measuring mode, the output is proportional to the sine of the angle of tilt. This fact limits the effectivity of the sensor for tilt angles approaching ±90°.

Rev. C © Singer Instruments & Control Inc., 2012 WWW.SINGER-INSTRUMENTS.COM


Information furnished by Singer Instruments & Control is believed to be accurate and reliable. However, no responsibility is assumed by Singer Instruments & Control for its use, nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of Singer Instruments & Control Ltd.

2 Yozma St., Tirat Carmel 39032, ISRAEL

Singer Instruments & Control Ltd.

Tel: 972-4-857-8880 Fax: 972-4-857-8881 yuval@singer-instruments.com

• DIMENSIONS (mm):

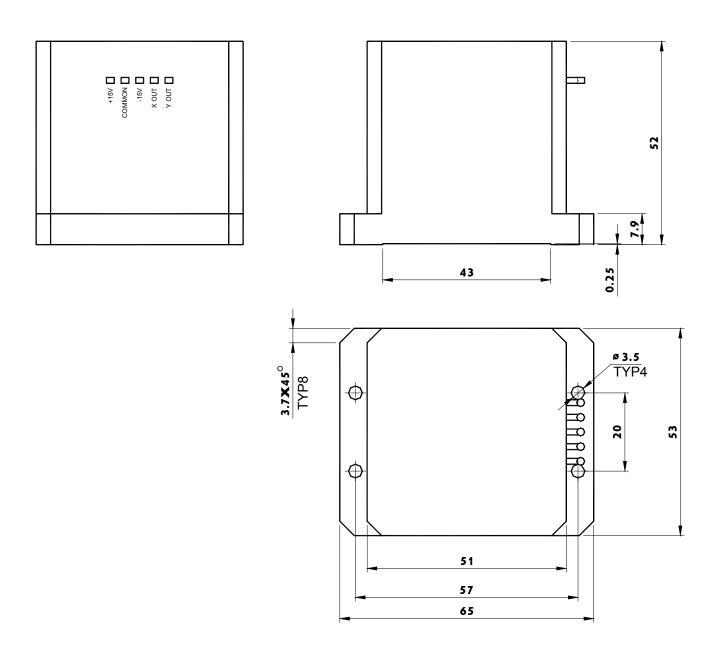

Rev. C

© Singer Instruments & Control Inc., 2012

WWW.SINGER-INSTRUMENTS.COM

Information furnished by Singer Instruments & Control is believed to be Singer Instruments & Control Ltd. accurate and reliable. However, no responsibility is assumed by Singer Instruments & Control for its use, nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of yuval@singer-instruments.com Singer Instruments & Control Ltd.

Tel: 972-4-857-8880 Fax: 972-4-857-8881